

Frequently Asked Questions

Does the Return Unit need an additional power supply?
No, its power comes from the Laundry Jet unit.

Where is the best location for the Return Unit?
The best location is either the furthest location from the laundry room or on the highest floor to minimize the back and forth to the bedrooms.

Can I add the Return Unit even if not being put in at the same time as the original Laundry Jet installation?
Yes, In 99% of cases it is possible to retrofit the Return Unit

How much does it cost?
The unit has a target list price of \$1,200. You need to factor in an extra port, pipe, fittings and installation.



www.laundry-jet.eu
Email: info@laundry-jet.eu
Tel Export: +44 (0) 1823 665 777
Tel UK: +44 (0) 1293 772 165
Mobile: +44 (0) 7879 822 284

Office: Globovac Ltd, 8C Castle Road, Chelston Business Park, Wellington, Somerset, TA21 9JQ, UNITED KINGDOM

LAUNDRY JET


RETURN SYSTEM



Returns your washed and dried clothes, bed linen and towels back to your bedroom at the touch of a button!

RETURN SYSTEM

Send clean and dry laundry back to your bedroom

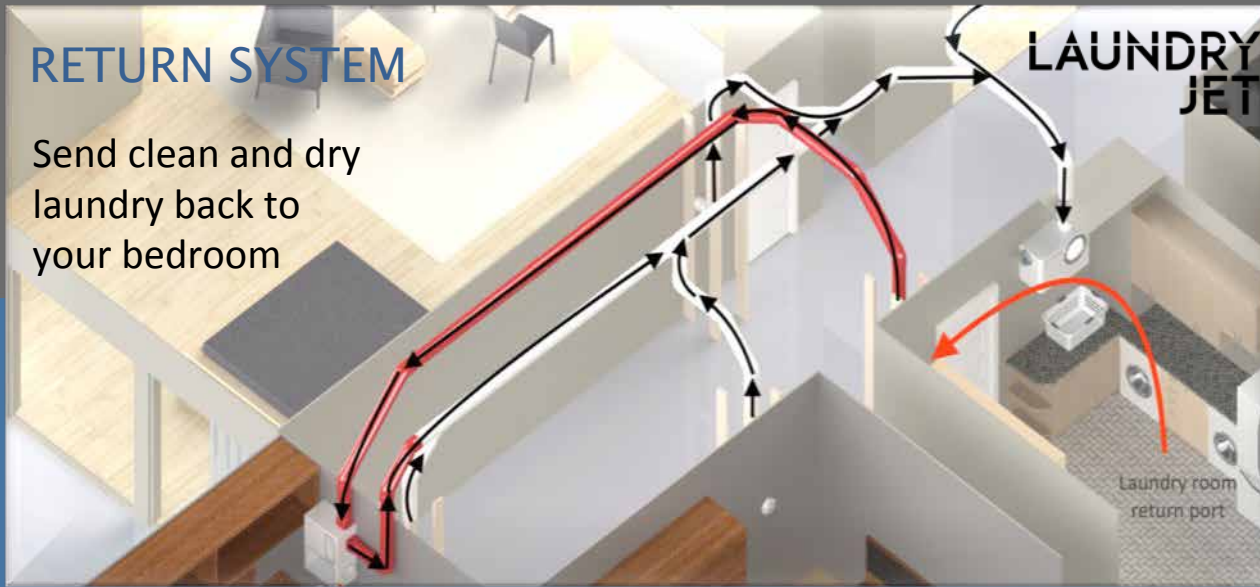

Overview

- Laundry Jet Return unit is the must-have option for any home wanting to totally close the circle on Laundry transport to and from the laundry room. Send clean and dried items back to the room most appropriate for receiving them. Especially useful if your bedrooms are upstairs and your laundry room is on a lower floor.
- Install a port in your Laundry room, install the Return Unit in the chosen bedroom, pipe in and enjoy dirty laundry delivery from bedrooms to laundry room and clean and dry laundry delivery from the laundry room back to the chosen bedroom.

Typical Setup

- Install an extra port in your laundry room and connect the cable to a spare port on the connector block of the Laundry Jet Unit.
- Install the Return Unit in the chosen bedroom (only one location per system).
- Pipe between the new port and the Return unit (this pipe will only have clean clothes traveling through it).
- Pipe into the top of the Return Unit and then pipe the other outlet up into a new wye in the main pipe run making a complete loop in the system.

How it Works

- When you turn on the port in the laundry room the Laundry Jet unit starts up and pulls air through the whole system which is now a loop.
- Send the clean and dried items through the port and the Return Unit intercepts them in your chosen location.
- The Return unit has the capacity of a large drier and is emptied via the front port hole door.
- No additional power required.
- Fold, iron, and put away the clean and dry clothing.

www.laundry-jet.eu